


# Installation Instruction

1

3. Mounting  
Screws  
Not Supplied

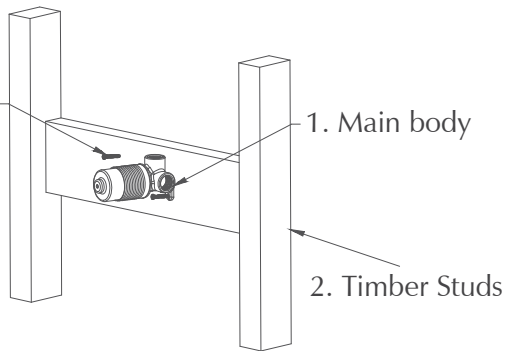

1. Place item ( Main Body) onto the timber studs or concrete wall e.t.c. screw into the frame.


( note: make sure mixer is level. )

1.1. Please don't remove protective cover until tiling is finished / Fit off.

2

3. Protective cover

1. Main Body


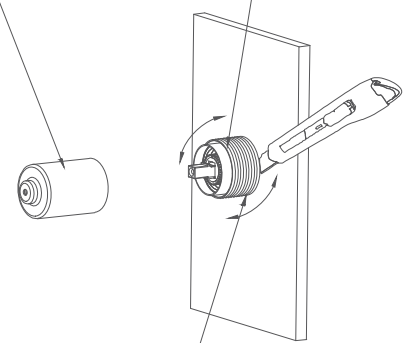


2. Remove protective cover and screw.

2.1. Cut off the black ABS sleeve at Fit off before caulking.

3


3. Cosmetic Dome

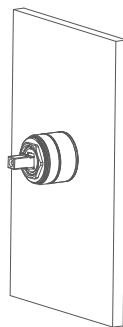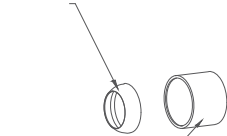

3. Install cartridge sleeve and cosmetic dome on the main body.


3.1

Dome position  
with Catridge in  
open position

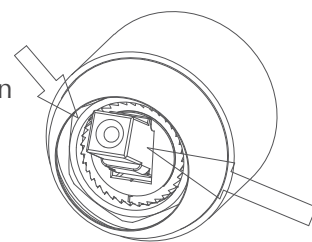

3.1. Please tilt cartridge lever to water flow open position, twist handle left and right to make sure cosmetic dome is in the right position before you tighten the handle.

4

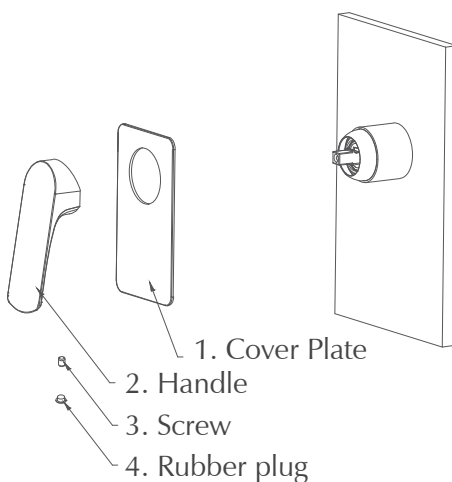

4. Install cover plate and handle on the main body.

4.1. Install cover plate

4.2. Install handle and tighten the screw

