

BELLAVISTA®

Basin install guide
V-1 (5025) KS


Scan for installation Guide



This Product must be installed by licensed plumber.


Step 1

Check the tap location before you mark out the benchtop. Using the basin as a template, mark out location of basin and mark the hole for basin waste. Make sure you use a pencil or such that will not mark the benchtop permanently and can be cleaned off.

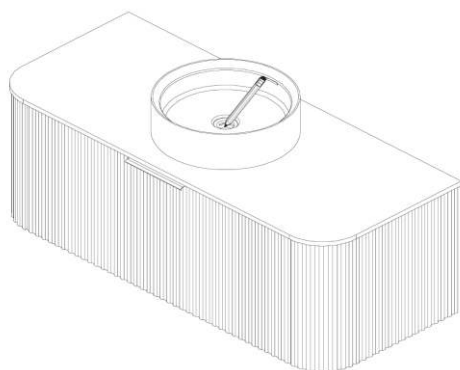


Step 2

Drill hole for basin waste with a hole saw.

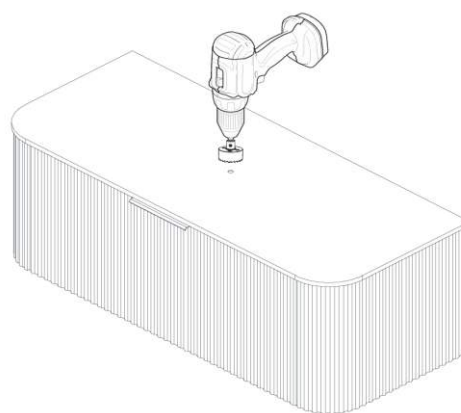


Step 3

Install pop up waste and attach to plumbing. Test by running water through the waste and check for leaks.

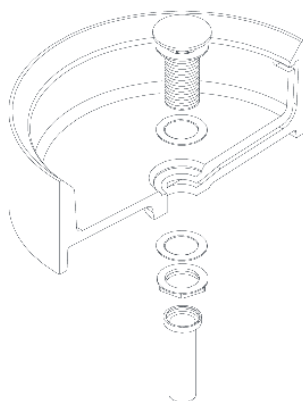

Step 4

Silicone basin to vanity benchtop as required, and allow 24 to 48 hours for silicone to dry before use (Do not use any Acidic Silicone on Solid Surface).

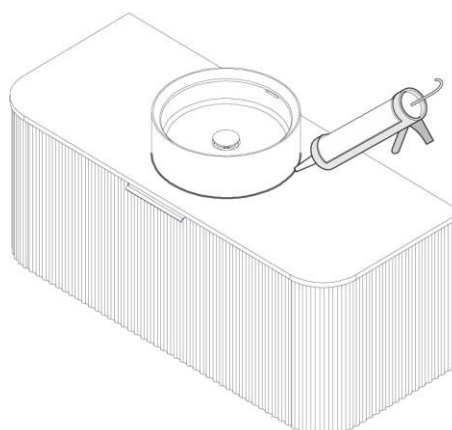

Thank you for Choosing Bella Vista