



Installation Instruction

1

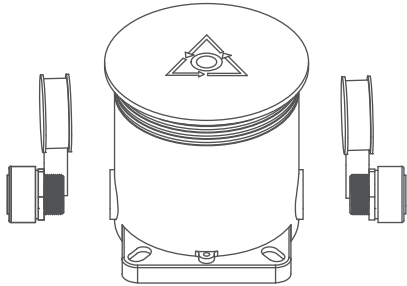


- 1.1. Ensure a generous amount of leflon tape to area required of brass fittings.
1.2. Connect brass fittings to concealed main body.

2

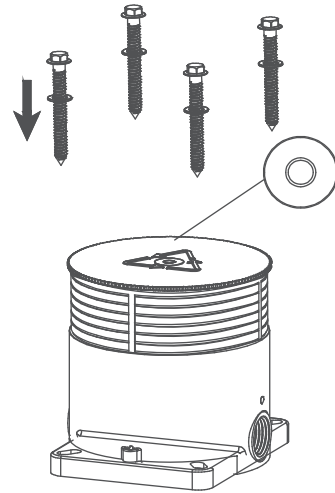


2. Pre drill holes for screws and tighten screws
note: make sure concealed body is installed horizontally.

3

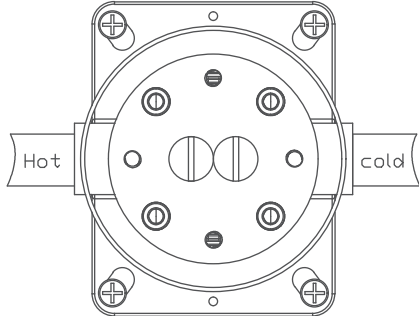

- 3.1. Connect hot and cold water pipe.
3.2. Conduct high-pressure pressure maintenance test and leak test on water pipes.

4

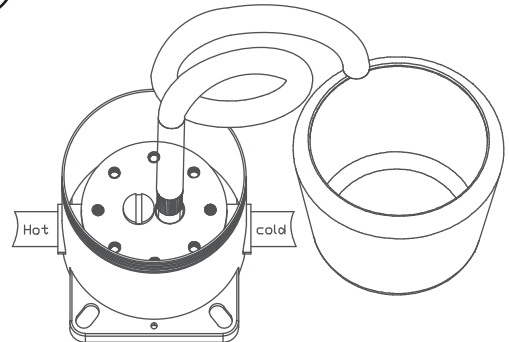

- 4.1. Remove plugs and insert hot and cold water flushing plugs.
4.2. Install water hoses and flush pipes until water is clean. Then remove water flushing plugs.




Please Note:

The Plumbing Code of Australia and the Australian Standards (AS/NZS 3500) require that water pressure on your property must not exceed 500kPa. Water mains pressure may be higher depending on where you live.

This tap must be installed by a licenced plumber.


Installation Instruction

5

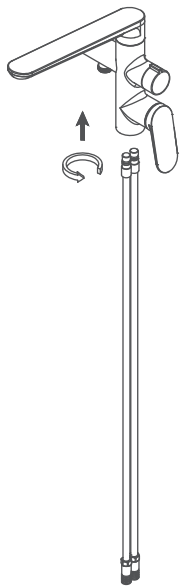


5. Screw hot and cold pipes into mixer body.

6

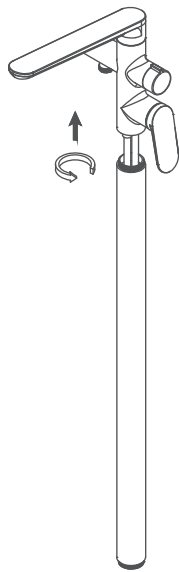


6. Screw extension pipe with mixer body.

7

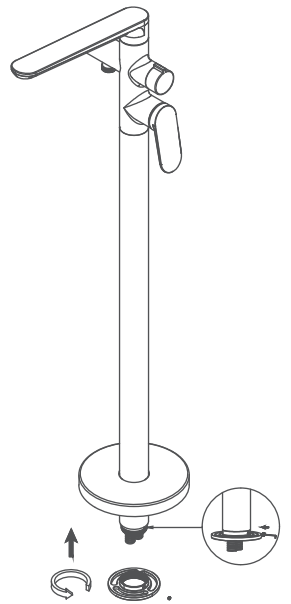


7.1. Slide backing plate onto body.
7.2. Install and tighten base plate with grub screw.

8

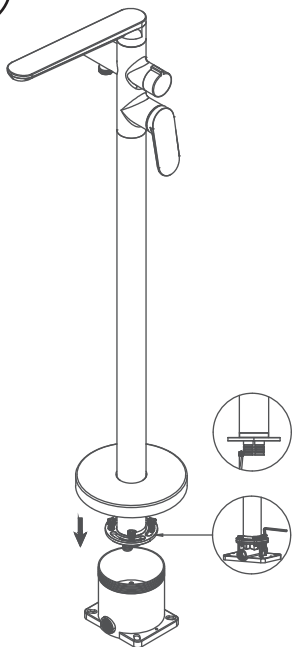


8.1. Lubricate O-rings and insert extended pipe onto mounting body.
8.2. Align body and fix in screws.

9

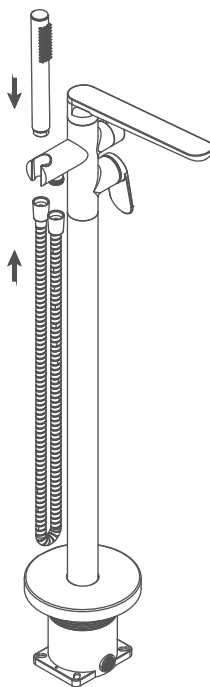

9.1. Drop down base plate cover.
9.2. Tighten hose to hand shower and body.

10

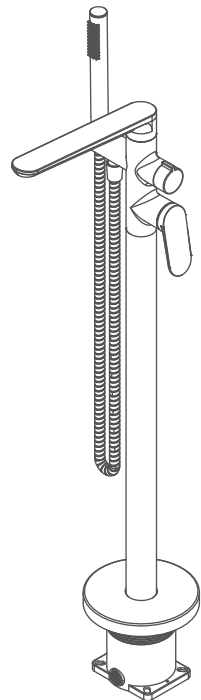

10. Installation completed and check for leaks.