



Installation Instruction

1

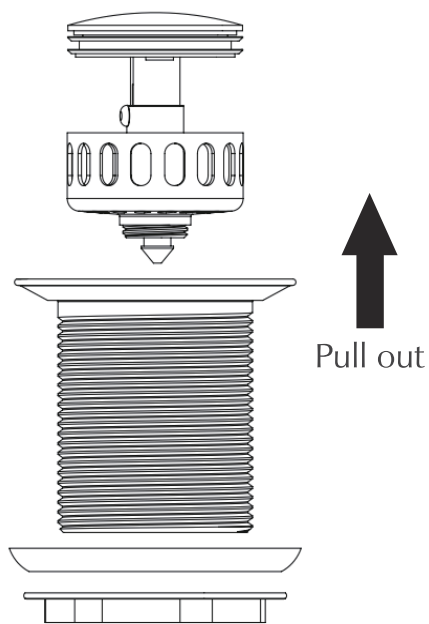


1. Disassemble pop-up waste by pulling out the cap.

2

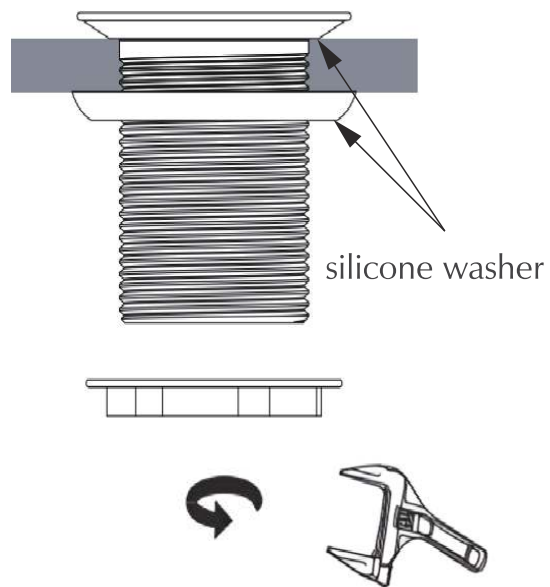


2. Push the pop up through the bath hole. Fit the washer and tighten up the nut on thread pipe by Shifter/Wrench.

3

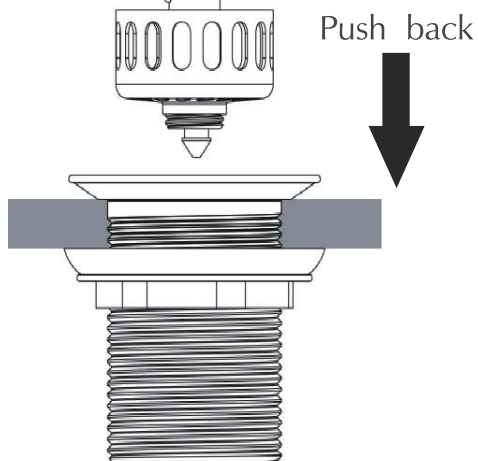

3. Push back the cap.

4

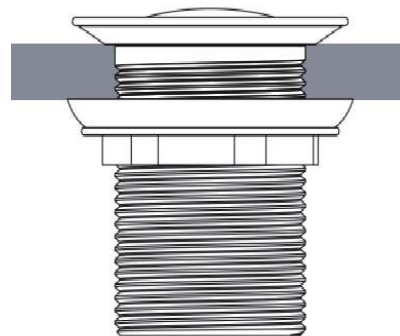

4. Finish, and check for leaks.



Please Note:

This must be installed by a licenced plumber.