


BELLAVISTA

Scan for installation Guide

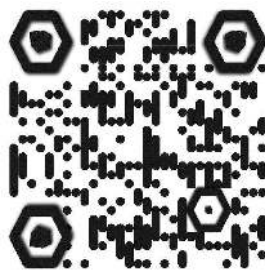

Item NO:
(4822) By K.S

Thank you for buying Bella Vista
This product must be installed by a
licensed plumber



The faucet is suitable for pre-cast cement floor. There are two installation methods: Embedment or surface mounting.

- 1、 Embedded: according to requirements, pre-casting cement at the installation position to form a 65mm pit with a diameter of 250mm depth, pre-installing a cold and hot water pipe into the pit, and backfilling cement can increase the fixing strength of the faucet;
- 2、 Surface mounted: No pre-excavation, directly installed on the concrete floor, plus decorative wood board, increase the appearance


The following description is based on the embedded mode: Step 1

1. 1. Make 10 holes with a diameter of 16 mm and a depth of 50 mm, and insert the expansion screws.
1. 2. Remove the nuts and gaskets of the expansion screws.
1. 3. Align the expansion screws and place them in the base



The base
hole

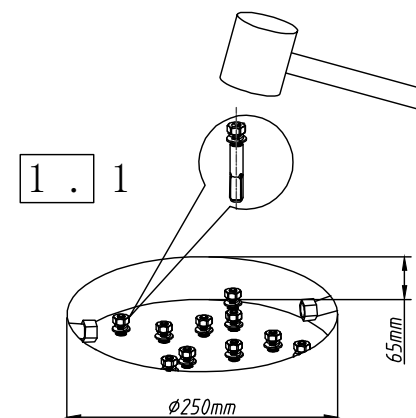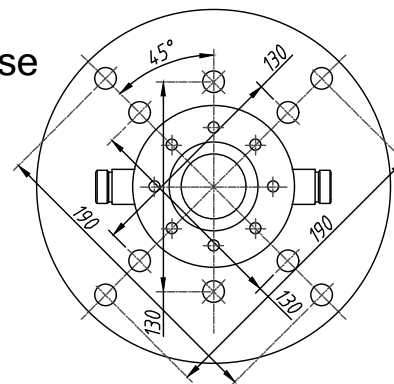

1 . 3

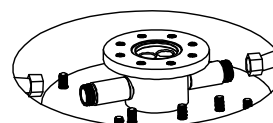


1 . 2

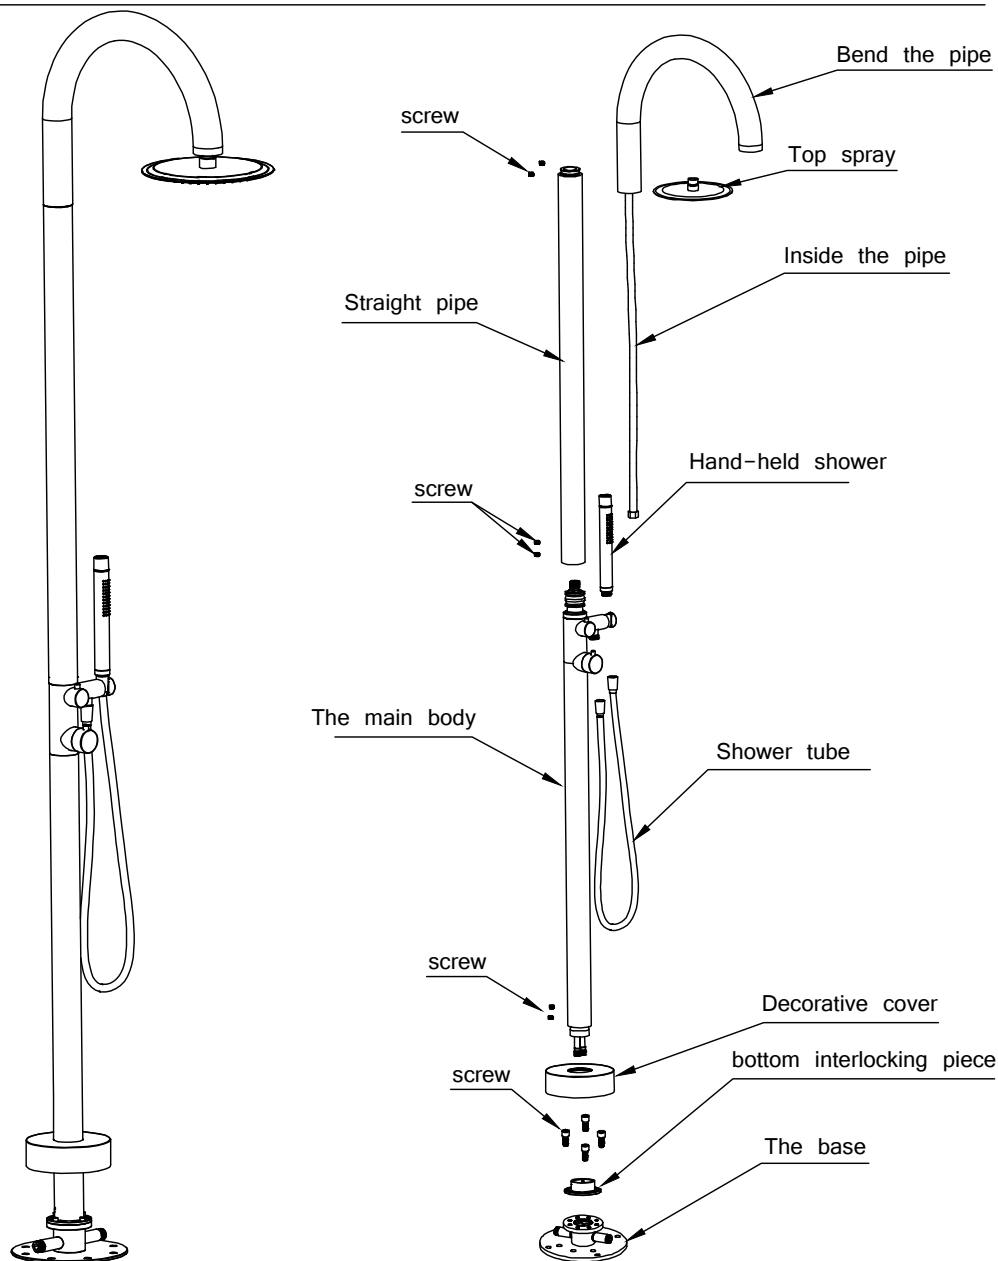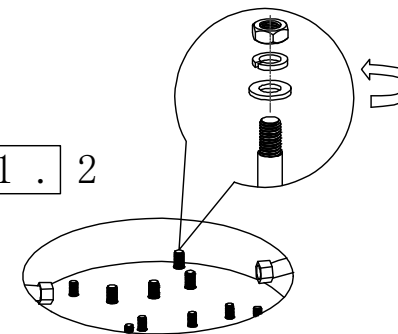


Step 2

2. 1. Lock the expansion screw with nuts and gaskets to fix the base;
2. 2. Install the water inlet pipe and tighten it with a wrench. If the angle is not right, use a flexible elbow to adjust it.
2. 3. Lay cement to cover the base, and leave the inside diameter of the base screw hole 145mm, with a depth of 20mm;
2. 4. A decorative board can be added on the basis of the above to improve the appearance.

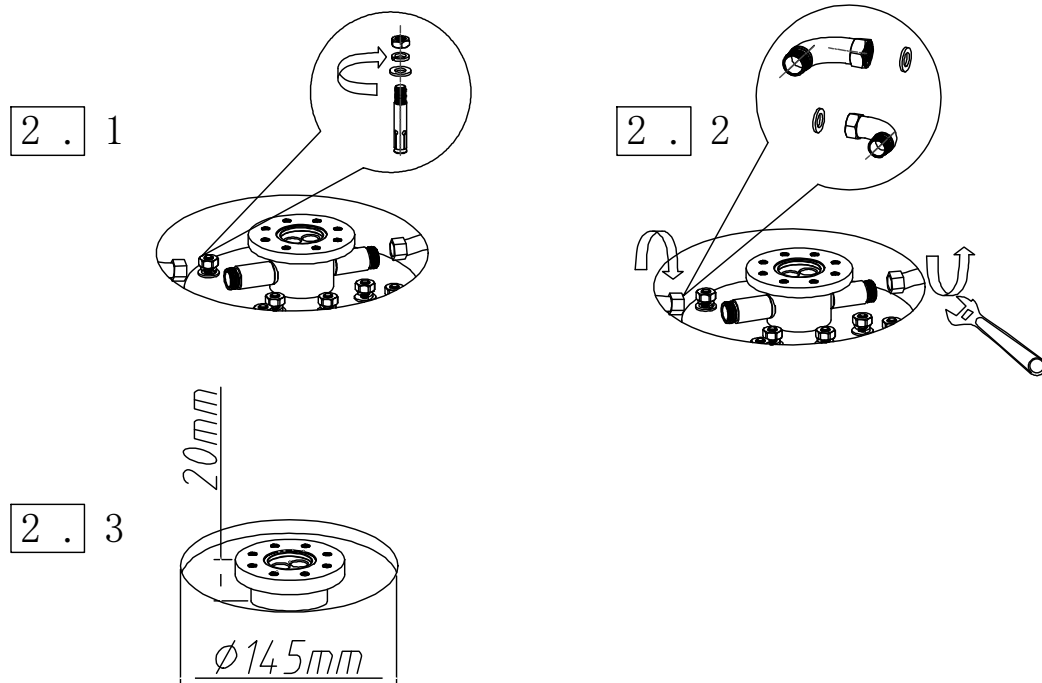


Step 3

- The straight pipe and the elbow are locked by hexagon socket screws; 3. 2. Top spray and elbow shall be locked

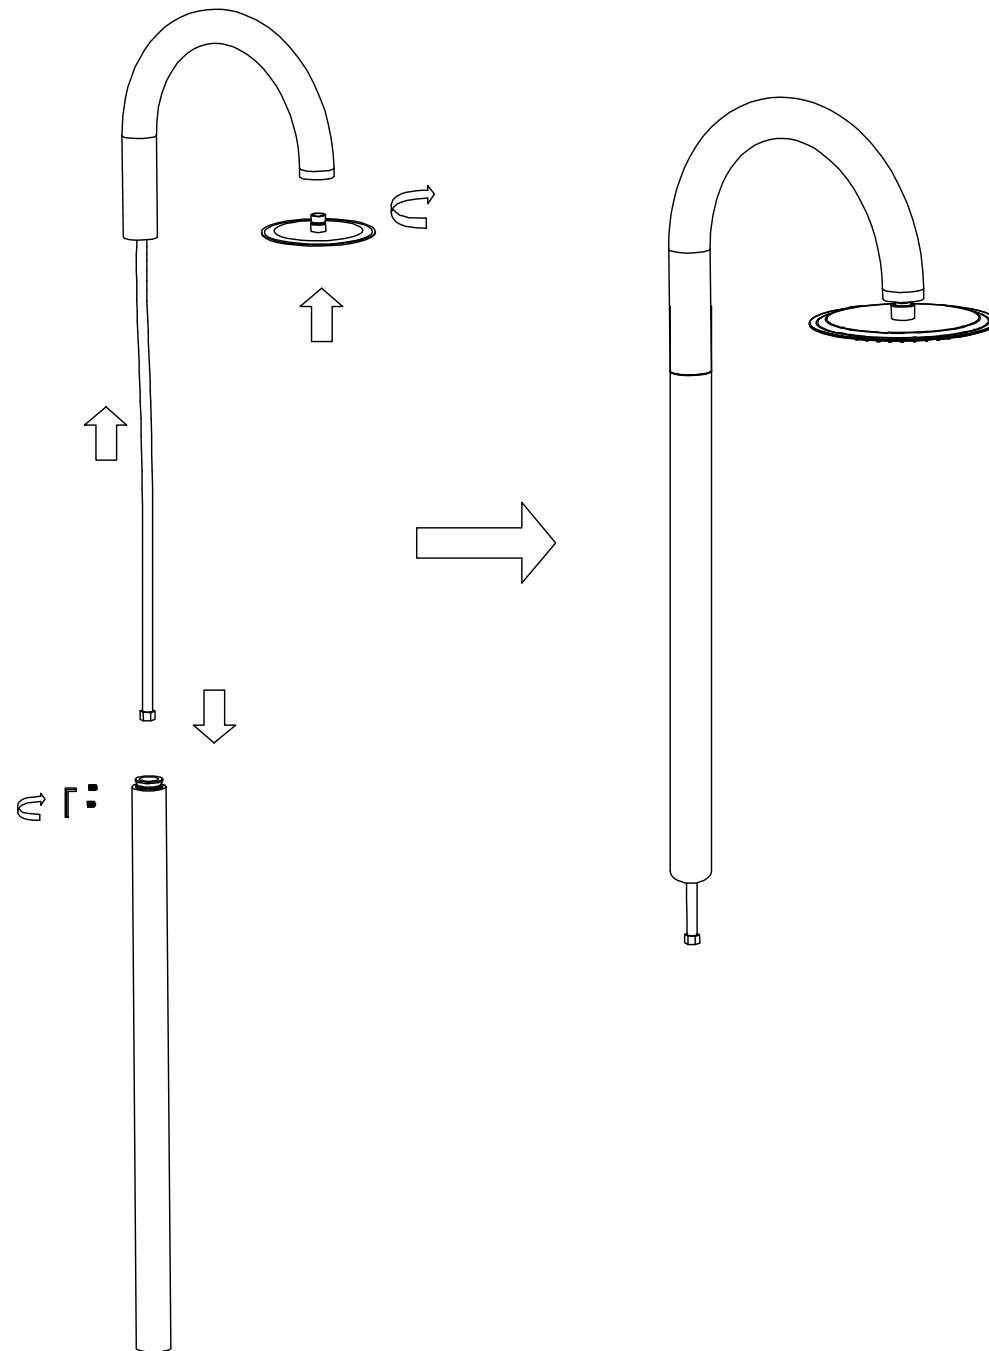


Step 4

4. 1. Connect the hose to the main body;
4. 2. Lock the main body and straight pipe with screws.
4. 3. Install the decorative cover.
4. 4. Tighten the main body and the bottom connecting piece and tighten the screws.
4. 5. Install shower pipe and hand shower.

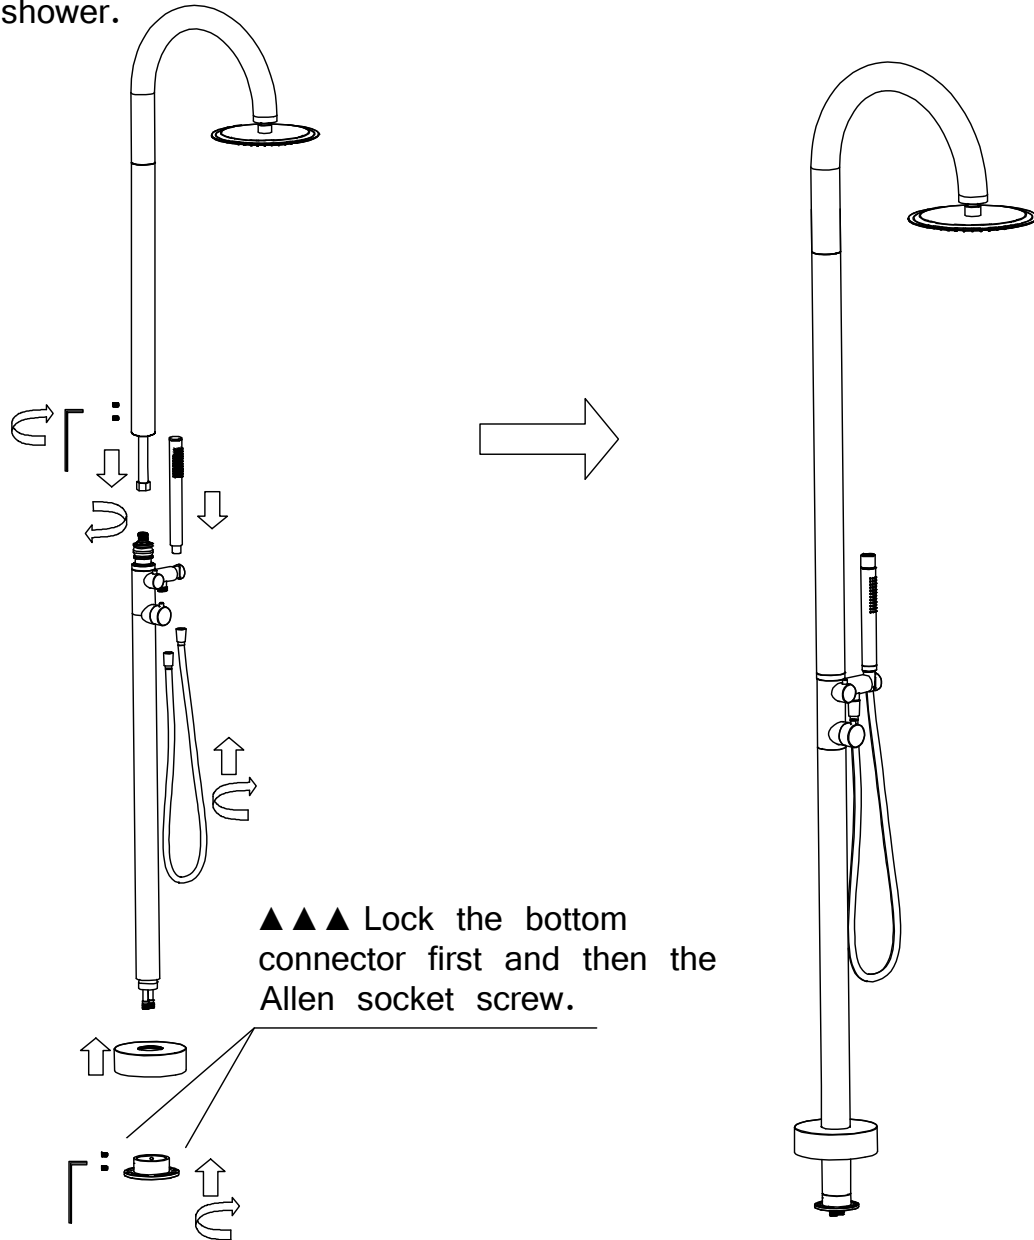

Step 5

- 5.1 Align the water inlet pipe of the faucet with the base hole and insert it into the base.
5. 2. Tighten the hexagon socket screws..

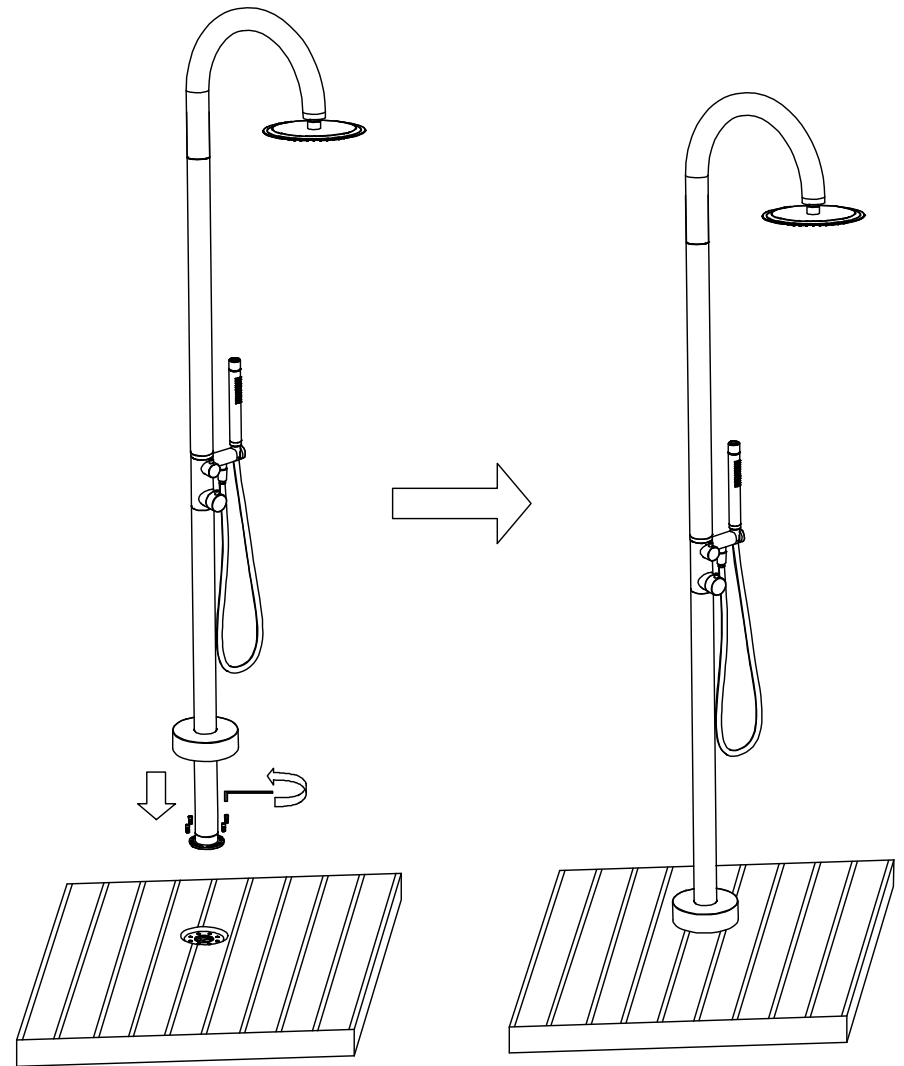

This Tap must be installed by a licensed plumber

Thank you for choosing Bella Vista