

Installation Instruction

1

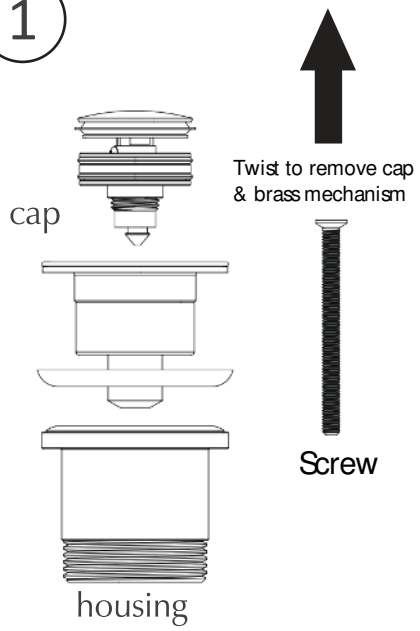


1. Dissemble pop-up waste by pulling out the cap and unscrewing the housing via the screw

2

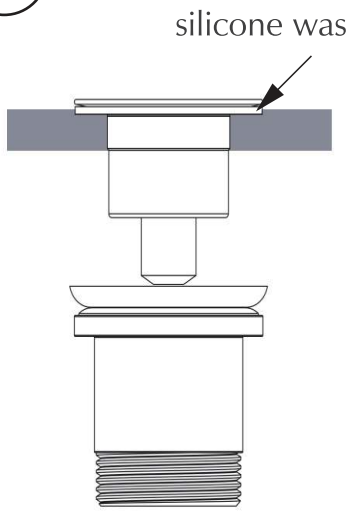


2. Put waste through basin hole ensuring silicone washer is fitted to the upper side of the basin

3

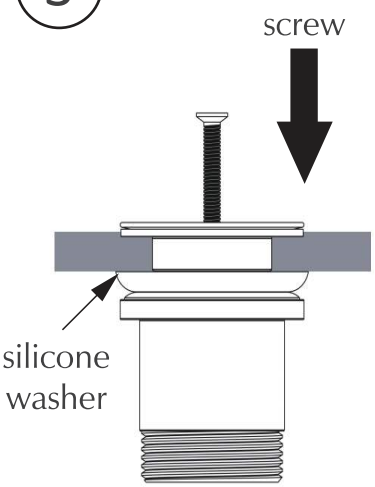


3. Place housing cover on the underside of the basin.
Drop the screw through the top waste and bottom housing

4

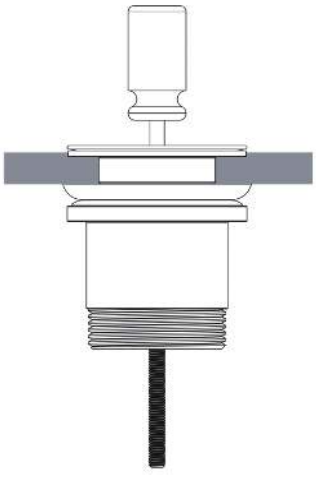


4. Tighten screw using screw driver

5

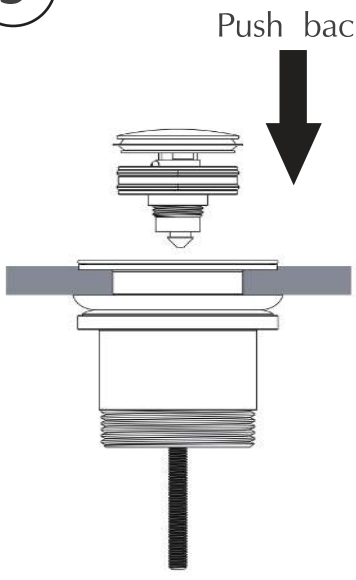

5. Insert cap back and twist by hand

6

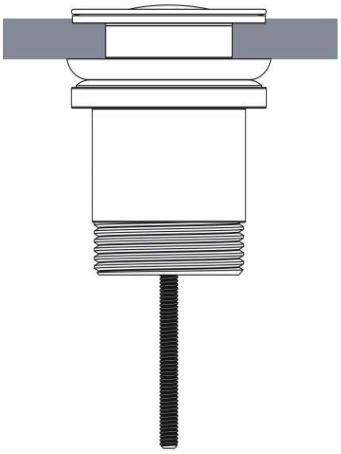

6. Finish, and check for leaks.

Please Note:
This must be installed by a licenced plumber.