

BELLAVISTA®

Basin install guide
V-1 (5025) KS


Scan for installation Guide



This Product must be installed by licensed plumber.


Step 1

Check the tap location before you Mark out the basin on the benchtop using a pencil or similar that can be cleaned and will not mark the benchtop permanently, cut out the area for the basin.

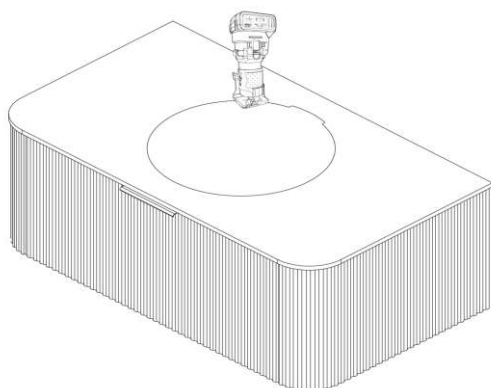


Step 2

Place the basin at the location required, make sure the overflow is centered (overflow can be placed at the front rather than the back so it's less visible).

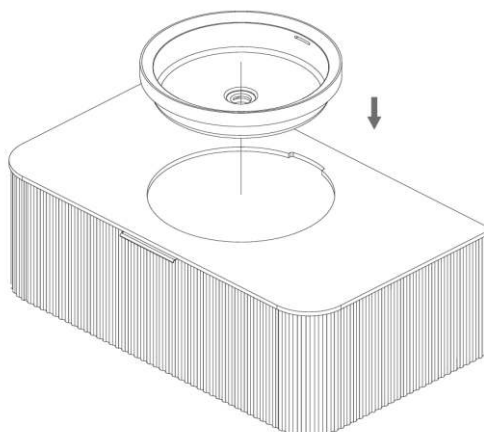


Step 3

Install pop up waste and attach to plumbing. Test by running water through the waste and check for leaks.

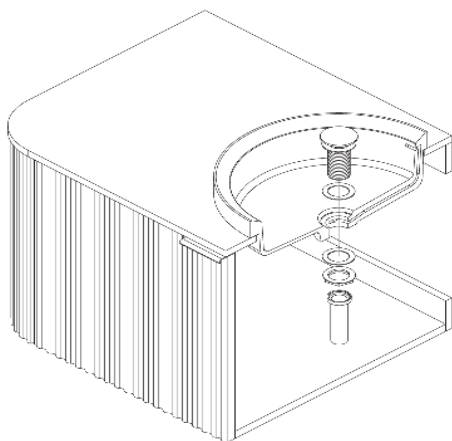

Step 4

Silicone basin to vanity benchtop as required. And allow 24 to 48 hours for silicone to dry before use depending on the environment. (Do not use any Acidic Silicone on Solid Surface).

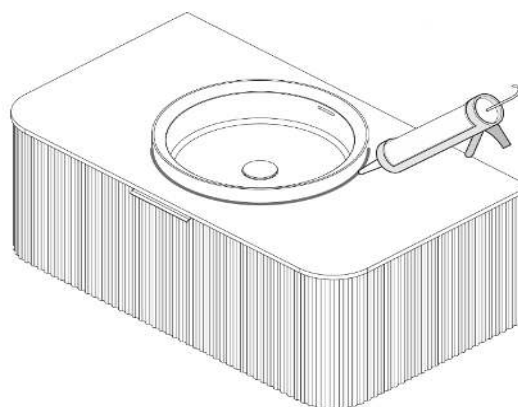

Thank you for Choosing Bella Vista