



Installation Instruction

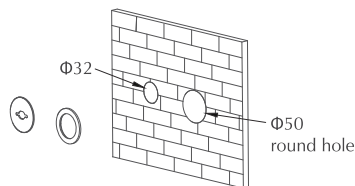

Note:


1. Hole size required for spout 32mm
2. Hole size required for mixer 50mm

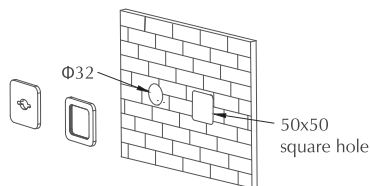

Note: (It fits Tiago & Beki range)

1. Hole size required for spout 32mm
2. Hole size required for mixer 50x50mm

1

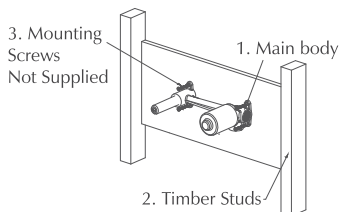


1. Place item (Main Body) onto the timber studs or concrete wall e.t.c. screw into the frame.

(note: make sure mixer is level.)


1.1. Please don't remove protective cover until tiling is finished / Fit off.

1.1

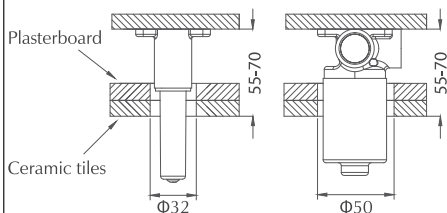


Installation tolerance: Depth 55-70mm from noggin to outer edge of ceramic tiles.

2

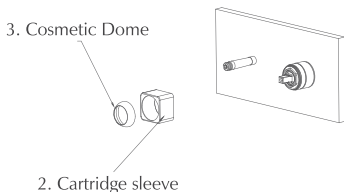

2. Install cartridge sleeve and cosmetic dome on the main body.

3

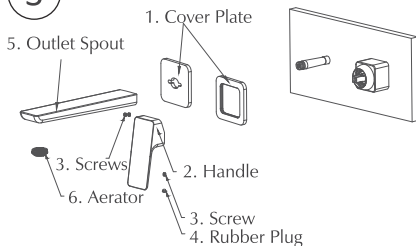

3. Install cover plate, Handle and outlet spout on the main body.

3.1. Install cover plate

3.2. Install handle and tighten the screw

3.3. Install outlet spout and tighten the screw