




This Product must be installed by licensed plumber


Step 1

Mark out the basin location on the wall using a pencil or similar that can be cleaned and will not mark the wall permanently mark out the holes to be drilled recommended height is 850 mm from FFL to the top of the basin (screws must be mounted into timber stud).

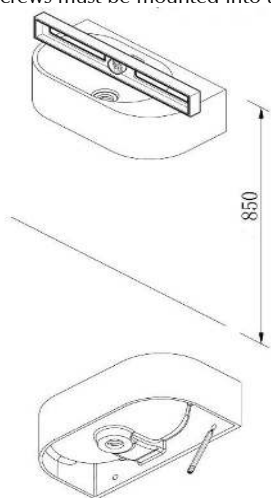


Step 2

Drill holes for the screws, mount screws into the wall , clean wall and back of the basin and apply non acidic silicon or similar to the back of the basin.

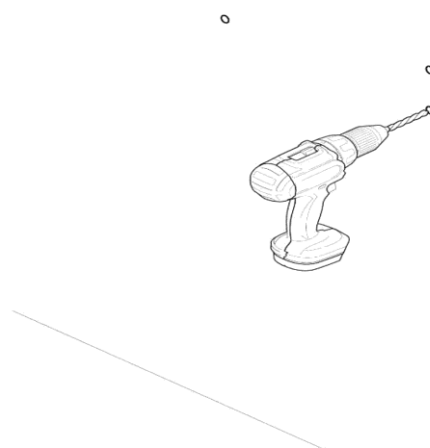

Step 3

Insert wall plugs.

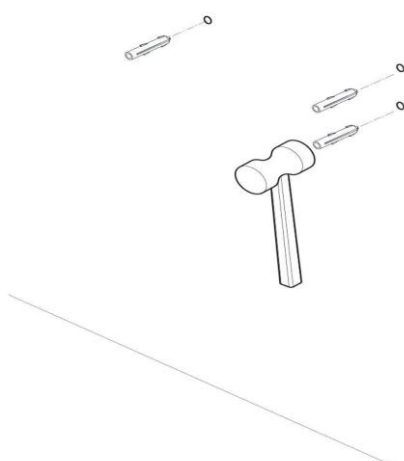

Step 4

Tighten screws into the wall using a shifter / wrench (avoid damaging the exposed thread where the nuts will screw into so they dont cross thread).



BELLAVISTA®

Basin install guide
V-1 (5025) KS


Scan for installation Guide



This Product must be installed by licensed plumber


Step 5

Attach basin to the wall using the screws and nuts provided.

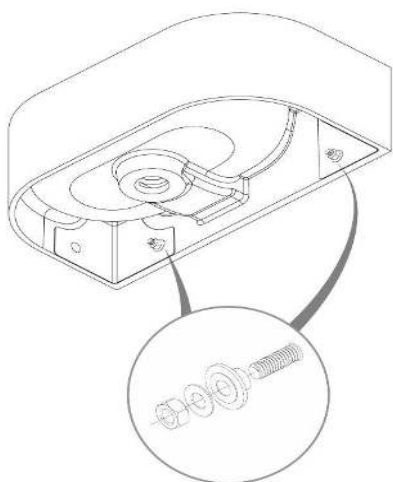


Step 6

Install the **pop up** waste to the basin, run water and check for leaks.

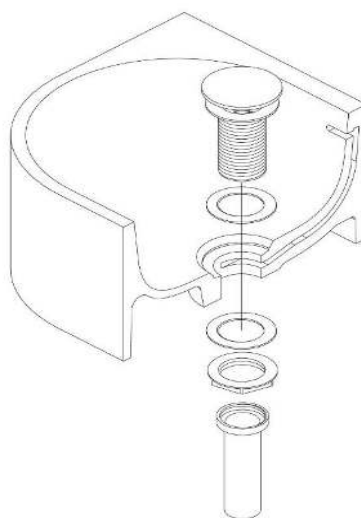


Step 7

Install the bottle trap.

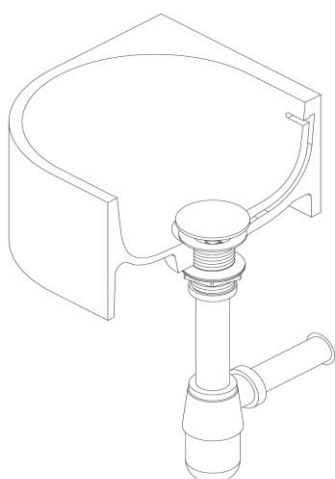

Step 8

Caulk the basin and do not use until the silicon has cured in 24 to 48 hours depending on the climate.

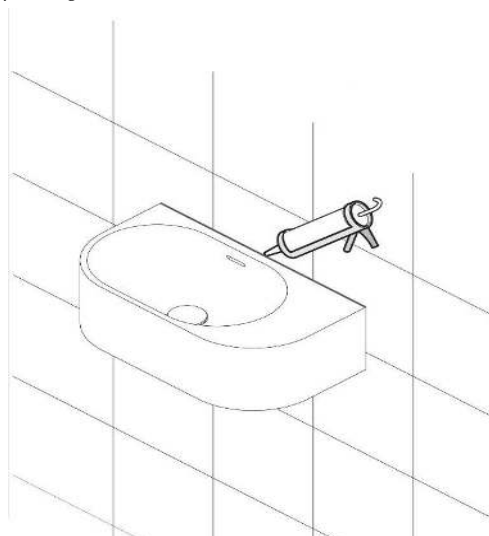

Thank you for Choosing Bella Vista